

Vejledning - Sort fjernbetjening

Guide- Black remote

Når du har tændt lyset i bunden, kan du efterfølgende slukke med off-knappen og tænde igen med on-knappen

You can then switch off with the off button and turn it back on with the on button – but beforehand start turning on the light at the bottom.

Med timer funktionen, kan du indstille lyset til at lyse i 2, 4, 6 eller 8 timer. Hvis du eksempelvis sætter en 4th-timer til kl. 17.00, slukker lyset kl. 21.00. Dagen efter tænder det igen kl. 17.00 og lyser i 4 timer. For at nulstille lyset, skal du slukke det manuelt med off-knappen i bunden. Når du sætter din timer, vil lyset blinke en gang i et kort sekund.


With the timer function, you can set the light to illuminate for 2, 4, 6 or 8 hours. For example, if you set a 4th timer to 5 p.m., the light goes out at 9:00pm. The light will automatically turn on at 5:00pm the day after. Reset the light manually with the off button at the bottom. When you set your timer, the light will blink once for a short second.

Hvis du vælger candle-mode, vil lyset stå og dimre som et almindeligt lys. Det vil altså ligne, at lyset flakket lidt. Med light-mode vil lyset være konstant.

If you choose candle mode, the light will dimmer like a regular light. So, it will look like the light flickers a little. With light mode, the light will be constant.

Med dim-effekten kan du skrue op og ned for lysstyrken.

The dim effect lets you turn the brightness up and down.

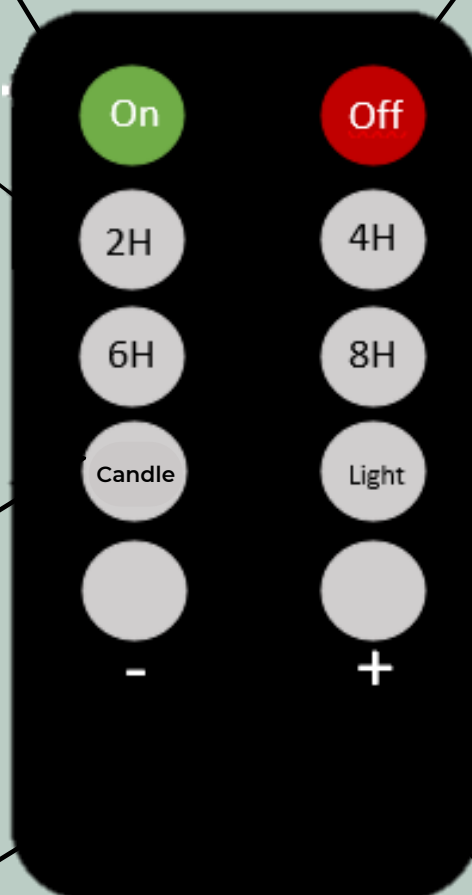

OBS: Før du bruger fjernbetjeningen, skal lyset være tændt via knappen i bunden.

NOTE: The light must be switched on via the button at the bottom, before using the remote control

Du finder den sorte fjernbetjening lige [her](#)

You can find the black remote by clicking here lednordic.no or here led-nordic.se